

USER MANUAL



CD100 Mountable Display With Keypad



Issued: 18.2.14

Copyright © 2011-2014 Campbell Scientific, Inc.
Printed under licence by Campbell Scientific Ltd.

Guarantee

This equipment is guaranteed against defects in materials and workmanship. This guarantee applies for twelve months from date of delivery. We will repair or replace products which prove to be defective during the guarantee period provided they are returned to us prepaid. The guarantee will not apply to:

- Equipment which has been modified or altered in any way without the written permission of Campbell Scientific
- Batteries
- Any product which has been subjected to misuse, neglect, acts of God or damage in transit.

Campbell Scientific will return guaranteed equipment by surface carrier prepaid. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This guarantee and the Company's obligation thereunder is in lieu of all other guarantees, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

Please inform us before returning equipment and obtain a Repair Reference Number whether the repair is under guarantee or not. Please state the faults as clearly as possible, and if the product is out of the guarantee period it should be accompanied by a purchase order. Quotations for repairs can be given on request. It is the policy of Campbell Scientific to protect the health of its employees and provide a safe working environment, in support of this policy a "Declaration of Hazardous Material and Decontamination" form will be issued for completion.

When returning equipment, the Repair Reference Number must be clearly marked on the outside of the package. Complete the "Declaration of Hazardous Material and Decontamination" form and ensure a completed copy is returned with your goods. Please note your Repair may not be processed if you do not include a copy of this form and Campbell Scientific Ltd reserves the right to return goods at the customers' expense.

Note that goods sent air freight are subject to Customs clearance fees which Campbell Scientific will charge to customers. In many cases, these charges are greater than the cost of the repair.



Campbell Scientific Ltd,
Campbell Park, 80 Hathern Road,
Shepshed, Loughborough, LE12 9GX, UK
Tel: +44 (0) 1509 601141
Fax: +44 (0) 1509 601091
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

PLEASE READ FIRST

About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. primarily for the North American market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

Area:	1 in ² (square inch) = 645 mm ²	Mass:	1 oz. (ounce) = 28.35 g 1 lb (pound weight) = 0.454 kg
Length:	1 in. (inch) = 25.4 mm 1 ft (foot) = 304.8 mm 1 yard = 0.914 m 1 mile = 1.609 km	Pressure:	1 psi (lb/in ²) = 68.95 mb
		Volume:	1 UK pint = 568.3 ml 1 UK gallon = 4.546 litres 1 US gallon = 3.785 litres

In addition, while most of the information in the manual is correct for all countries, certain information is specific to the North American market and so may not be applicable to European users.

Differences include the U.S standard external power supply details where some information (for example the AC transformer input voltage) will not be applicable for British/European use. *Please note, however, that when a power supply adapter is ordered it will be suitable for use in your country.*

Reference to some radio transmitters, digital cell phones and aerials may also not be applicable according to your locality.

Some brackets, shields and enclosure options, including wiring, are not sold as standard items in the European market; in some cases alternatives are offered. Details of the alternatives will be covered in separate manuals.

Part numbers prefixed with a “#” symbol are special order parts for use with non-EU variants or for special installations. Please quote the full part number with the # when ordering.

Recycling information



At the end of this product's life it should not be put in commercial or domestic refuse but sent for recycling. Any batteries contained within the product or used during the products life should be removed from the product and also be sent to an appropriate recycling facility.

Campbell Scientific Ltd can advise on the recycling of the equipment and in some cases arrange collection and the correct disposal of it, although charges may apply for some items or territories.

For further advice or support, please contact Campbell Scientific Ltd, or your local agent.



Campbell Scientific Ltd, Campbell Park, 80 Hathern Road, Shepshed, Loughborough, LE12 9GX, UK
Tel: +44 (0) 1509 601141 Fax: +44 (0) 1509 601091
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

Contents

PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.

1. Introduction	1
2. Cautionary Statements	1
3. Quickstart	2
4. Overview	2
5. Specifications	3
6. Installation	3
7. Operation	6
8. Maintenance	7

Figures

1. Connecting the CD100 to the CR1000 Datalogger	2
2. Template Measurements	4
3. Profile of Installed CD100	5
4. Display Menu Overview	7

CD100 Mountable Display with Keypad

1. Introduction

The CD100 is an easy-to-read panel-mountable datalogger data display. It includes a large-format keypad for input. The CD100 is compatible with several Campbell Scientific dataloggers. Refer to Section 5. Specifications for a complete list. When properly installed, the CD100 is weather and dust resistant. As a purchased service, Campbell Scientific offers the option of installing the CD100 into an enclosure.

2. Cautionary Statements

- The CD100 is not compatible with the CR850 datalogger, nor should it be used in tandem with the CR1000KD keyboard and display on any datalogger.
- Weather resistance of the CD100 is dependent on proper installation into the bulkhead of a weather tight enclosure. See Section 6. Installation for details of proper installation.
- The CD100 is easily damaged if disassembled. If disassembly is required, refer to Section 8. Maintenance.



CD100 Mountable Display with Keypad

3. Quickstart

1. If the CD100 is to be mounted into an enclosure bulkhead, refer to Section 6. Installation for instructions.
2. Using an SC12 cable as shown in Figure 1, connect the 9-pin CS I/O port of a CR1000 or other compatible datalogger to the 9-pin CS I/O port on the back of the CD100.



Figure 1. Connecting the CD100 to the CR1000 Datalogger

3. Power the datalogger; the display should power up and be ready for use. Keyboard commands are summarized in Section 7. Operation and in the datalogger manual.

4. Overview

The CD100 is a panel-mountable display with keypad. It facilitates user input and the display of data over a wide temperature range. The vacuum fluorescent element gives the CD100 high contrast, so it is easy to read in daylight conditions.

The CD100 is compatible with the dataloggers listed in Section 5. Specifications. It will not operate properly with the CR850 datalogger or in tandem with the CR1000KD on any datalogger.

When properly installed, the polyvinyl face and rear gasket make the CD100 weather resistant and prevent ingress of water and dust. The back of the CD100 is not weather resistant. If used outdoors, or in a condensing environment, the CD100 should be bulkhead mounted as recommended in Section 6. Installation.

5. Specifications

Compatibility:	CR800 (not CR850) CR1000 CR3000
Interface:	CS I/O, SDC address 2
Temperature	
Operating:	-45° to 85°C
Storage:	-50° to 85°C
Transit:	1 hour at -60°C
Power Requirement	
Source:	12 VDC from datalogger CS I/O port
Current Draw	
Inactive:	0.02 mA
Active:	140 mA
Features:	
	Operable with gloved hand
	16 key alpha numeric keypad
	8 line x 21 character display (64 x 128 pixel)
Certification:	CE Compliant
Rating	
Water and dust ingress	
Installed as recommended:	IP66
Uninstalled:	None (vulnerable to water and dust)
Weight:	0.36 kg (0.80 lbs)
Dimensions:	176 x 138 x 8 mm (6.9 x 5.4 x 1.4 in)

6. Installation

NOTE

As a purchased service, Campbell Scientific offers the option of installing the CD100 into an enclosure.

Install only on a flat, non-porous surface. The supplied gasket must create a weather-tight seal when installed or permanent damage to the display and other enclosure contents may occur.

1. Use the template shipped with the CD100 or create a template using the measurements shown in Figure 2. Template Measurements.
2. Make the required cuts in the bulkhead.
3. Remove cutting debris from bulkhead.
4. Mount the CD100 as shown in Figure 3. Profile of Installed CD100.
5. Before tightening screws, adjust the gasket to align it just inside the edges of the display. Uniformly tighten the screws, but do not over-tighten.

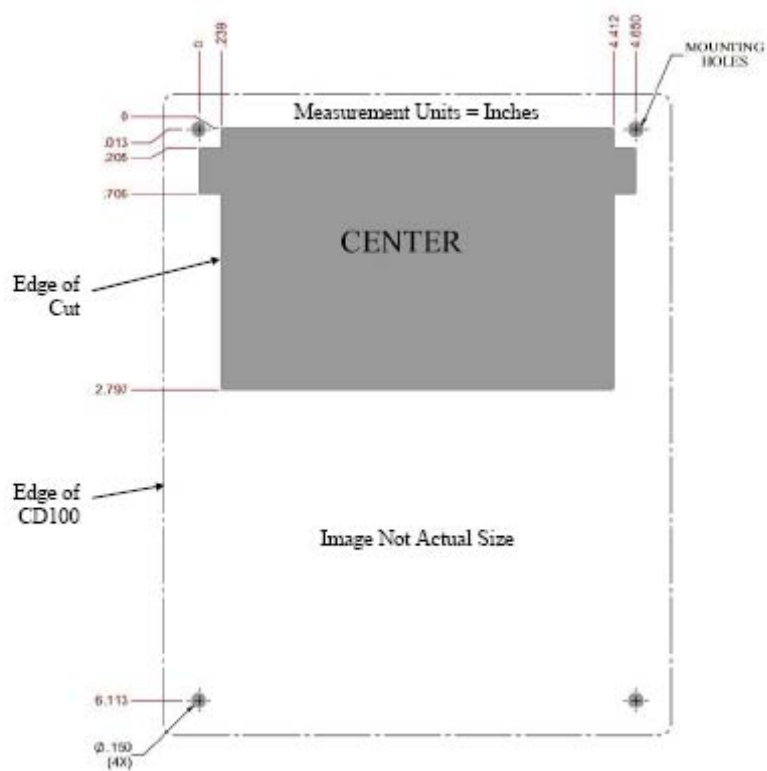


Figure 2. Template Measurements

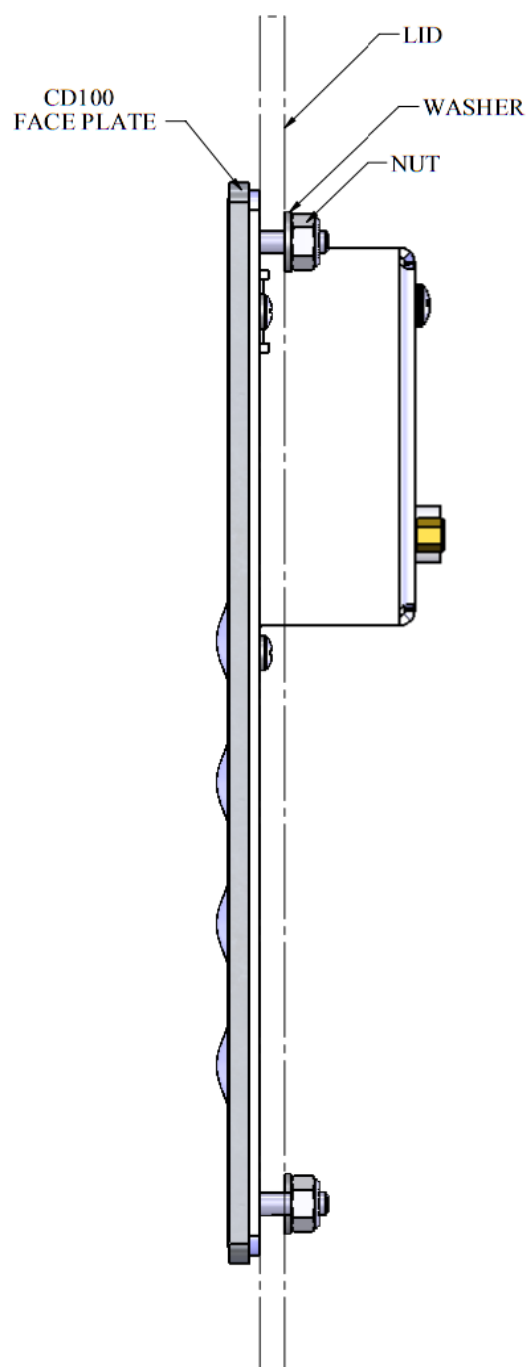


Figure 3. Profile of Installed CD100

7. Operation

An overview of keyboard functions is presented in Table 1. Keyboard and Display Key Function and Figure 4. Display Menu Overview. Detailed descriptions are available in the datalogger manual.

Table 1. Keyboard Display Key Functions	
Key	Special Function
[2] and [8]	To navigate up and down through the menu list one line at a time
[Enter]	Selects the line or toggles the option of the line the cursor is on
[Esc]	Back up one level in the menu
[Home]	Move cursor to top of the list
[End]	Move cursor to bottom of the list
[Pg Up]	Move cursor up one screen
[Pg Dn]	Move cursor down one screen
[BkSpc]	Delete character to the left
[Shift]	Change alpha character selected
[Num Lock]	Change to numeric entry
[Del]	Delete
[Ins]	Insert/change graph setup
[Graph]	Graph

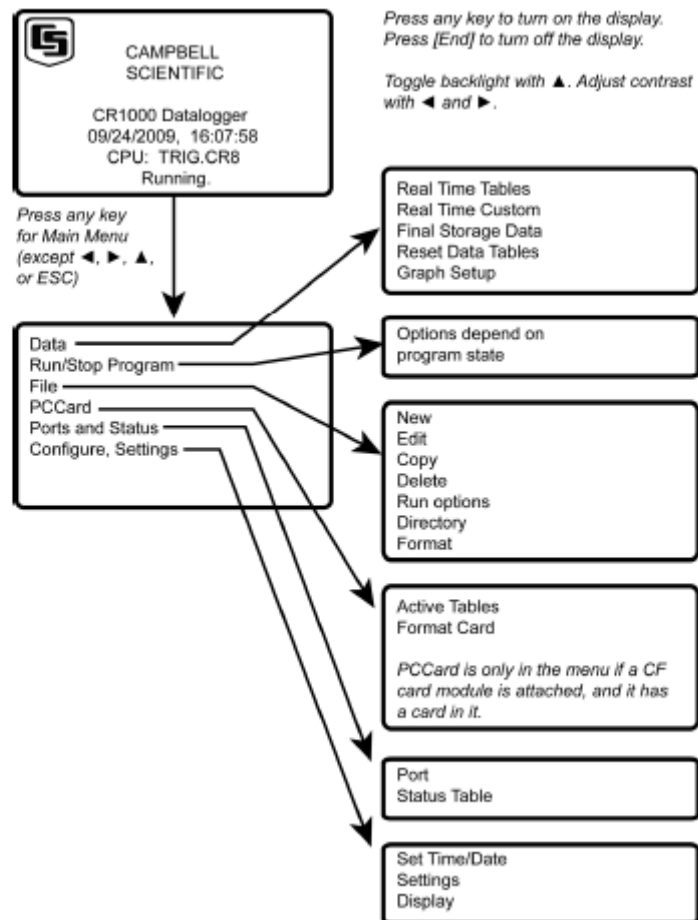


Figure 4. Display Menu Overview

8. Maintenance

Active desiccant must be maintained in the datalogger enclosure to avoid water damage to the display electronics, the datalogger, and other contents. No other maintenance is required.

Depending on the environment and weather tightness of the installation, dust may accumulate between the surface window and the underlying display elements. If this occurs, return the display to Campbell Scientific for cleaning.

Do not disassemble the CD100. The printed circuit ribbon connecting the keypad to the display can be easily torn when not removed properly. If the display must be disassembled, take care to grasp the header and not the printed circuit itself. Sheer or torsional stresses must not be put on the printed circuit. The warranty does not cover damages caused by disassembly.

CAMPBELL SCIENTIFIC COMPANIES

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES

www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA

www.csafrica.co.za • sales@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 8108
Garbutt Post Shop
QLD 4814 AUSTRALIA

www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL

www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA

www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300N Cementerio, Edificio Breller
Santo Domingo, Heredia 40305
COSTA RICA

www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM

www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

3 Avenue de la Division Leclerc
92160 ANTONY
FRANCE

www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Avda. Pompeu Fabra 7-9
Local 1 - 08024 BARCELONA
SPAIN

www.campbellsci.es • info@campbellsci.es

Campbell Scientific Ltd. (Germany)

Fahrenheitstrasse13, D-28359 Bremen
GERMANY

www.campbellsci.de • info@campbellsci.de

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.